

VOLVO Euro 5 fault codes erasing device using manual

General view of the device:



1 step. Connect the device into the vehicle OBD port.

2 step. Switch on the ignition.

3 step. The error erasing carried out by completely pushing throttle pedal and keeping pushed for 30 seconds while ignition is on. Notes:

- 1) The error erasing is possible only within the first 5 minutes while ignition is on, then it is necessary the ignition to switch off and switch on again.
- 2) At one time ignition switched on, errors can be cleared only once in order. To repeat deleting process you need to switch off and switch on the ignition again.

The error deleting function description:

LED indicator values while deleting errors.

While keeping pressed the accelerator for 30 seconds LED lights up red, this marks the start of erasing errors. The red LED phase lasts up to 5 seconds.

Further green light LED indicates successful erasure of errors.

If the errors is not deleted the LED flashing red light. In this case, repeat the procedure again, and, if the result is the same, then check the connection of the fault codes erasing device.

Control units from which is erasing errors:

The engine control unit, the central control unit (VECU), tachograph, brake system control unit.

If desired, the control block list may be modified.