

Volvo FH4 Euro 6 fault deleting device manual

Device purpose - delete existing fault codes for FH4 Euro6 Volvo trucks.

General view:



The device is made of the corps and OBD (diagnostic) connector on the one end.

The interface with the customer performed through the device emitted an acoustic signal.

Verification:

Volvo truck menu choose: Maintenance →Diagnostics → DTC →EMS

If in the fault code list is the fault code P20F400, use our device to delete fault codes.

How to use this device:



1 step. The car OBD connector is in this place behind the plastic cover. The screwdriver will be needed to unfix the cover clip. Connect the device to truck OBD (diagnostic) connector. As confirmation that the device is properly connected, it starts to sound the alarm with intermittent – frequent peeping about 10Hz, it is about 10 times per 1 second.

2 step. Switch on the ignition. As confirmation that the ignition is turned on peeping slows down and stays at frequency of 1Hz it is about 1 time per 1 second.

3 step. Wait about 1 minute until you hear a continuous sound signal.

4 step. After a continuous audio signal fault codes deleting operation is complete, the fault codes is removed. Switch off the ignition.

5 step. Disconnect the device from the vehicle's OBD connector and put on the cover.